

## Inkjet Cartridge - Inkjet Photo Paper



### Inkjet Cartridge

Inkjet cartridge can be used on various printers , Such as:

#### **HP - Inkjet Cartridge**

Inkjet Cartridges No.	Printer Model No.
HP 51629A NO.29	HP-DJ660C/670C/690C/692C/695C/725
HP 51649A No.49	HP-DJ610/630/640/656/660/670C/690C/692C/695C/725
HP 51626A No.26	DJ400/450/500Q/500C/525Q
HP 51633	DJ400/450/500Q/500C/525Q
HP 51625A	HP810C/830C/840C
HP 51640A No.40	HP-DJ1200/230/330/350/430/450/650
HP 51641A	DJ850C/870C
HP 51645A No.45	HP-DJ1600/700/710830/850/870/880/890/895C
HP1823A/D No.23	HP710/810/830/880/890C/895C/1120/1125C
HP 6614A/D No.20	HPDJ610/630/640/656C
HP 6615A/D No.15	HPDJ750/810/840/845/920/948C/V40/3820/5110
HP 6625A No.17	HPDJ840/845C
HP 6578A/D	HP-DJ750/920/930/948/950/970/990/1180/1220C/V40/3820/5110/6122
HP 6656 No.56	HP5550/7150/7550/7660/450/5160/5510/5652/6100/4110/
HP 6657 No.57	4255/6110/1110/1210/2210/2310/9600/9650
HP 6658 No.58	HPDJ5550/6100/6110/7150/7550/3658/4255/2110/2310/9650/7268/7660/9600/1318

HP 8727 No.27	HPDJ3322/3323/3325/3420/3320/3550/3650/3535/1315
HP 8728 No.28	
HP 8816A	HPDJ1218/3500/3658/3538/3558/3668/5168/1118/7268/3748/1218/1318
HP 8817A	
HP 9359 No59	HP145/148/245/7960
HP 4840BK/No.10	HP500/800/CAD PRO1700/100/2300
HP 4841C	
HP 4842M	
HP 4843Y	
HP 4844B/No.10	
HP 4836C	HP1700/100/2300
HP 4837M	
HP 4838Y/No.11	
HP 4814B/No.13	HP1000/2800/850
HP 4815C	
HP 4816M	
HP 4817Y	
HP(82)4911A	HP Designjet 10ps / 20ps / 50ps / 120ps / 500 / 500ps / 800 / 800ps / 815mfp
HP(82)4912A	
HP(82)4913A	
(HP84)5016A	HP Designjet 10 PS/20 PS/50 PS/30 Serie/120/120 NR/130 Serie
HP(84)5017A	
HP(84)5018A	
HP(02/801/363)8721A	HP Photosmart 3110 / 3210 / 3310 / 8250
HP(02/801/363)8771A	
HP(02/801/363)8772A	
HP(02/801/363)8773A	
HP(02/801/363)8774A	
HP(02/801/363)8775A	
HP(85)9425A	
HP(85)9426A	HP30/.30GP/30N/90/90R/130/130GP/130NR
HP(85)9427A	
HP(85)9428A	
HP(85)9428A	

HP(85)9429A	
HP 5010B/No.14	HP Colour Printer 1160 HP Colour Printer 1160 HP Officejet D series - D125xi , D135 , D145 , D155xi
HP 5011C	HP Officejet 7100 series , 7110 , 7110xi , 7115 , 7130 , 7130xi , 7135 , 7140 , 7140x
HP 8765E/338	HP DeskJet 460C, 5740 , 5745 , 6520 , 6540 , 6620 , 6840 , 9800
HP 8766E/343	
HP 8767E/339	HP PhotoSmart 2570 , 2575 , 2605 , 2608 , 2610 , 2613 , 2615 , 2710 , ,
HP 9363E/344	8750 , 8150 , 2713 , 8150 , 8450,8450, C3100 , C3170 , C3180 , C3190 , PRO 8350
HP8765WN/94	HP5740/6520/6540/6620/6830/6840/6940/6210/7310/7410/2610/2710
HP8766WN/95	
HP8767WN96	7850/8150/1600/1610/2350series.etc
HP9363WN/97	
HP8765H/131	Photosmart PSC 2710, 2610, 2355, 1610, 1510
HP8766H/135	Deskjet 460c, 6840, 5740
HP8767H/130	Officejet 7410, 7210, 6210
HP9363H/134	Photosmart 7830, 8753
HP8765Z/852	
HP8766Z/855	
HP8767Z/853	HP2358/5748/6848/2068/8185/8548/7048/2358/325/375etc
HP9363Z/857	
HP9369Z/858	
HP 21B/9351	HPDJ3910/3915/3930/3940/4310/5605/5610/1401/1402/1410/1417